

# AIRSTREAM ASE16/100 PARTS LIST

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
1	Screw	51	Screw
2	Air filter	52	Centrifugal switch
3	Cylinder head	53	Screw
4	Screw	54	Osculant plate
5	Valve packing 1	55	Screw
6	Valve seat	56	Motor cover(back)
7	Valve packing 2	57	Bearing 3
8	Valve plate	58	Motor
9	Valve packing 3	59	Motor shell
10	Cylinder	60	Air discharge lock
11	Compression ring	61	Pressure gauge 1
12	Scraper ring	62	Regulator kits
13	Piston	63	Electrical wire
14	Piston pin	64	Connector
15	Snap ring 1	65	Capacitor box
16	Connecting rod	66	Capacitor 1
17	Crank shaft	67	Reset
18	Screw	68	Screw
19	Cylinder packing	69	Capacitor 2
20	Bearing 1	70	Capacitor box cover
21	Front cover packing	71	Screw
22	Front cover	72	Bearing 4
23	Screw	73	Motor cover(front)
24	Oil glass	74	Screw
25	O ring	75	Key
26	Crank case	76	Motor pulley
27	Crank case o ring	77	Screw
28	Nether cover	78	Belt
29	Oil stopple	79	Electrical plug
30	Screw	80	Pressure switch
31	Breathing cap	81	Pressure gauge 2
32	Screw	82	Air tank
33	Bearing 2	83	Air discharge lock
34	Oil seal	84	Wheel 1
35	Back cover packing	85	Screw
36	Back cover	86	Air discharge lock
37	Screw	87	Safety valve
38	Pulley	88	Check valve kits
39	Washer	89	Connector
40	Screw	90	Exhaust pipe
41	Valve packing 4	91	Screw
42	Cooler	92	Motor frame
43	Screw	93	Screw
44	Connector	94	Wheel pin
45	Screw cap	95	Wheel 2
46	Cuprum pipe	96	Water drain valve
47	Screw	97	Screw
48	Fan cover	98	Fixed frame
49	Snap ring 2	99	Shield
50	Fan	---	---